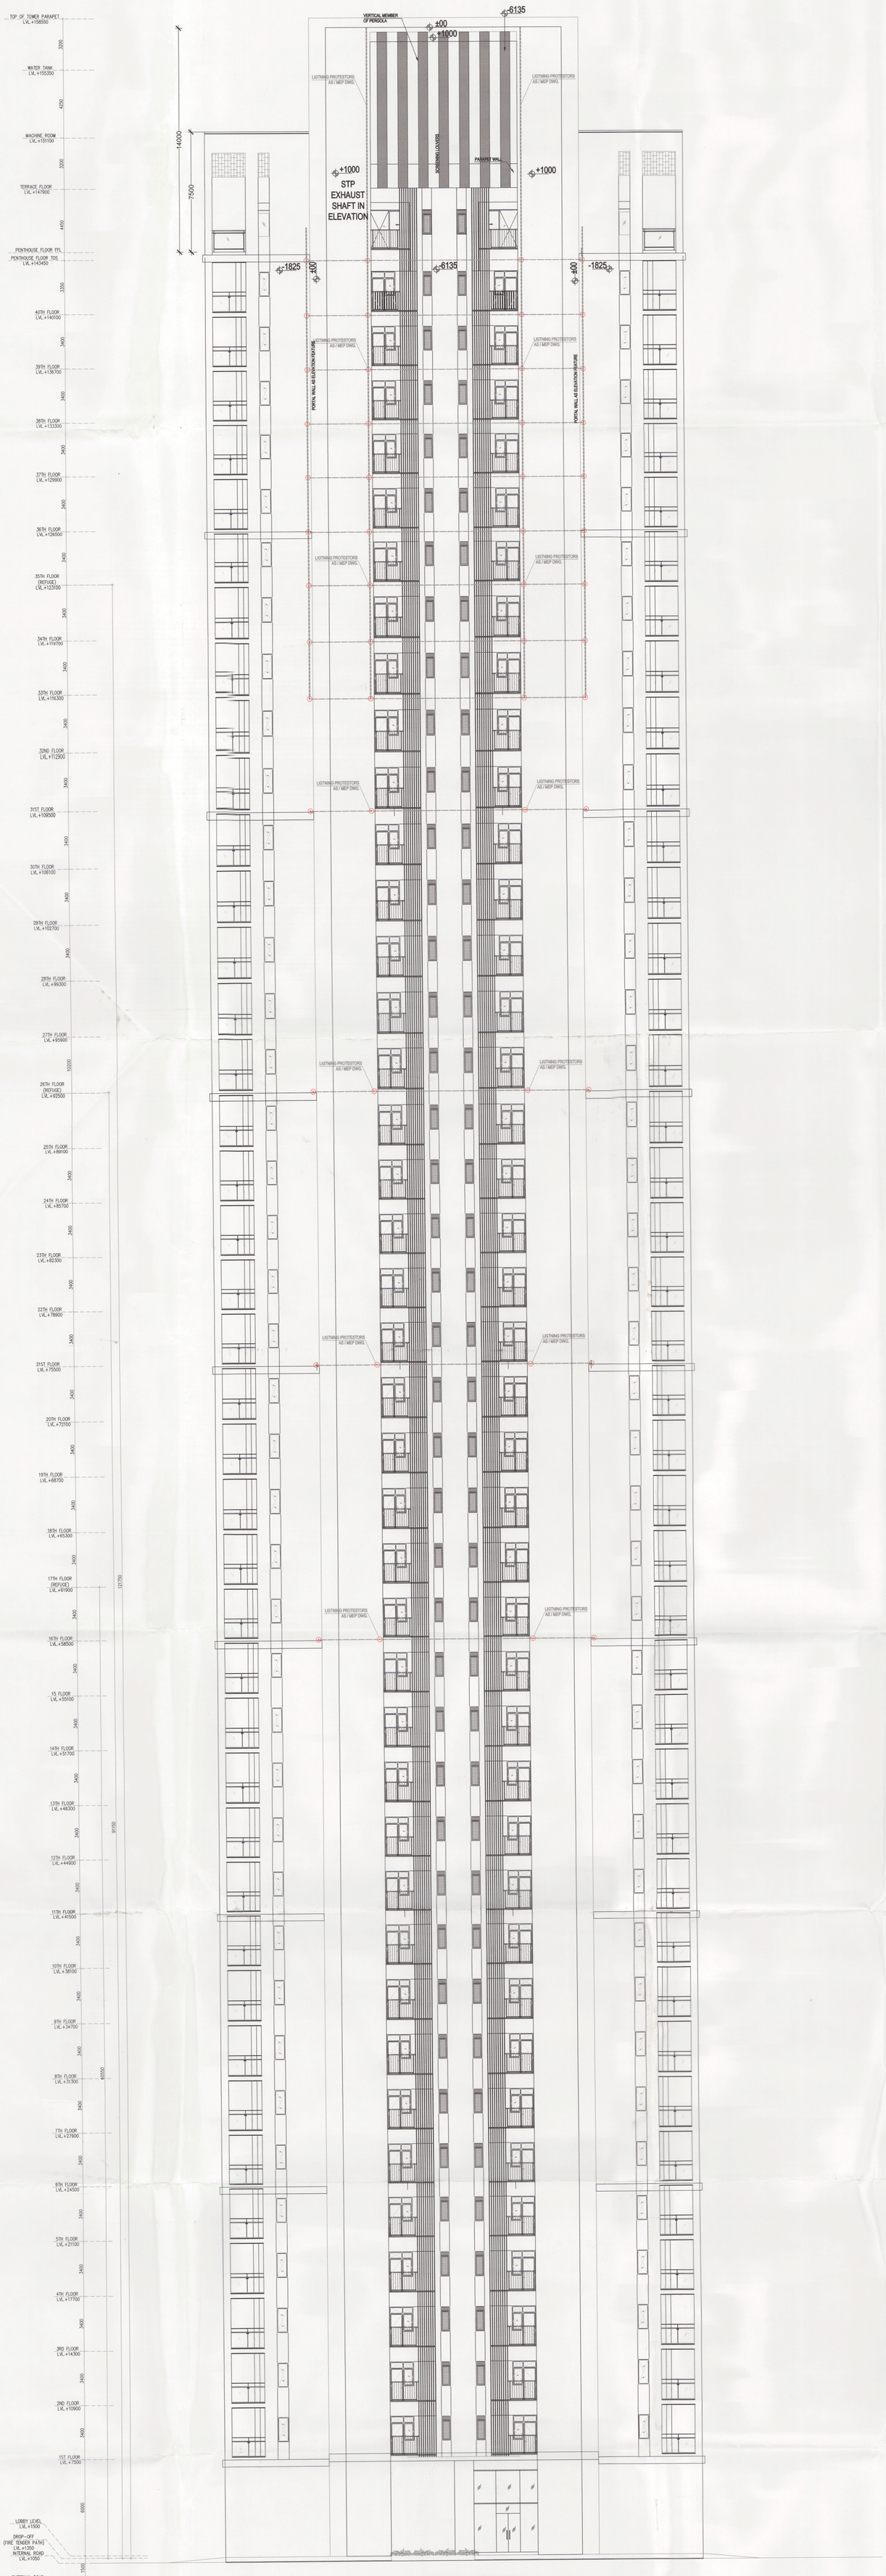
TOP OF TOWER PARAPET LVL.+158550
WATER TANK LVL.+155350
MACHINE ROOM LVL.+151100
TERRACE FLOOR LVL.+147900
PENTHOUSE FLOOR FFL
PENTHOUSE FLOOR TOS LVL.+143450
40TH FLOOR LVL.+140100
39TH FLOOR LVL.+136700
38TH FLOOR LVL.+133300
37TH FLOOR LVL.+129900
36TH FLOOR LVL.+126500
35TH FLOOR (REFUGE) LVL.+123100
34TH FLOOR LVL.+119700
33TH FLOOR LVL.+116300
32ND FLOOR LVL.+112900
31ST FLOOR LVL.+109500
30TH FLOOR LVL.+106100
29TH FLOOR LVL.+102700
28TH FLOOR LVL.+99300
27TH FLOOR LVL.+95900
26TH FLOOR (REFUGE) LVL.+92500
25TH FLOOR LVL.+89100
24TH FLOOR LVL.+85700
23TH FLOOR LVL.+82300
22TH FLOOR LVL.+78900
21ST FLOOR LVL.+75500
20TH FLOOR LVL.+72100
19TH FLOOR LVL.+68700
18TH FLOOR LVL.+65300
17TH FLOOR (REFUGE) LVL.+61900
16TH FLOOR LVL.+58500
15 FLOOR LVL.+55100
14TH FLOOR LVL.+51700
13TH FLOOR LVL.+48300
12TH FLOOR LVL.+44900
11TH FLOOR LVL.+41500
10TH FLOOR LVL.+38100
9TH FLOOR LVL.+34700
8TH FLOOR LVL.+31300
7TH FLOOR LVL.+27900
6TH FLOOR LVL.+24500
5TH FLOOR LVL.+21100
4TH FLOOR LVL.+17700
3RD FLOOR LVL.+14300
2ND FLOOR LVL.+10900
1ST FLOOR LVL.+7500
LOBBY LEVEL LVL.+1500
DROP-OFF (FIRE TENDER PATH) LVL.+1250
INTERNAL ROAD LVL.+1050
EXTERNAL ROAD LVL ±00
3200
4250
3300
4450
3350
3400
3450
3400
3400
3400