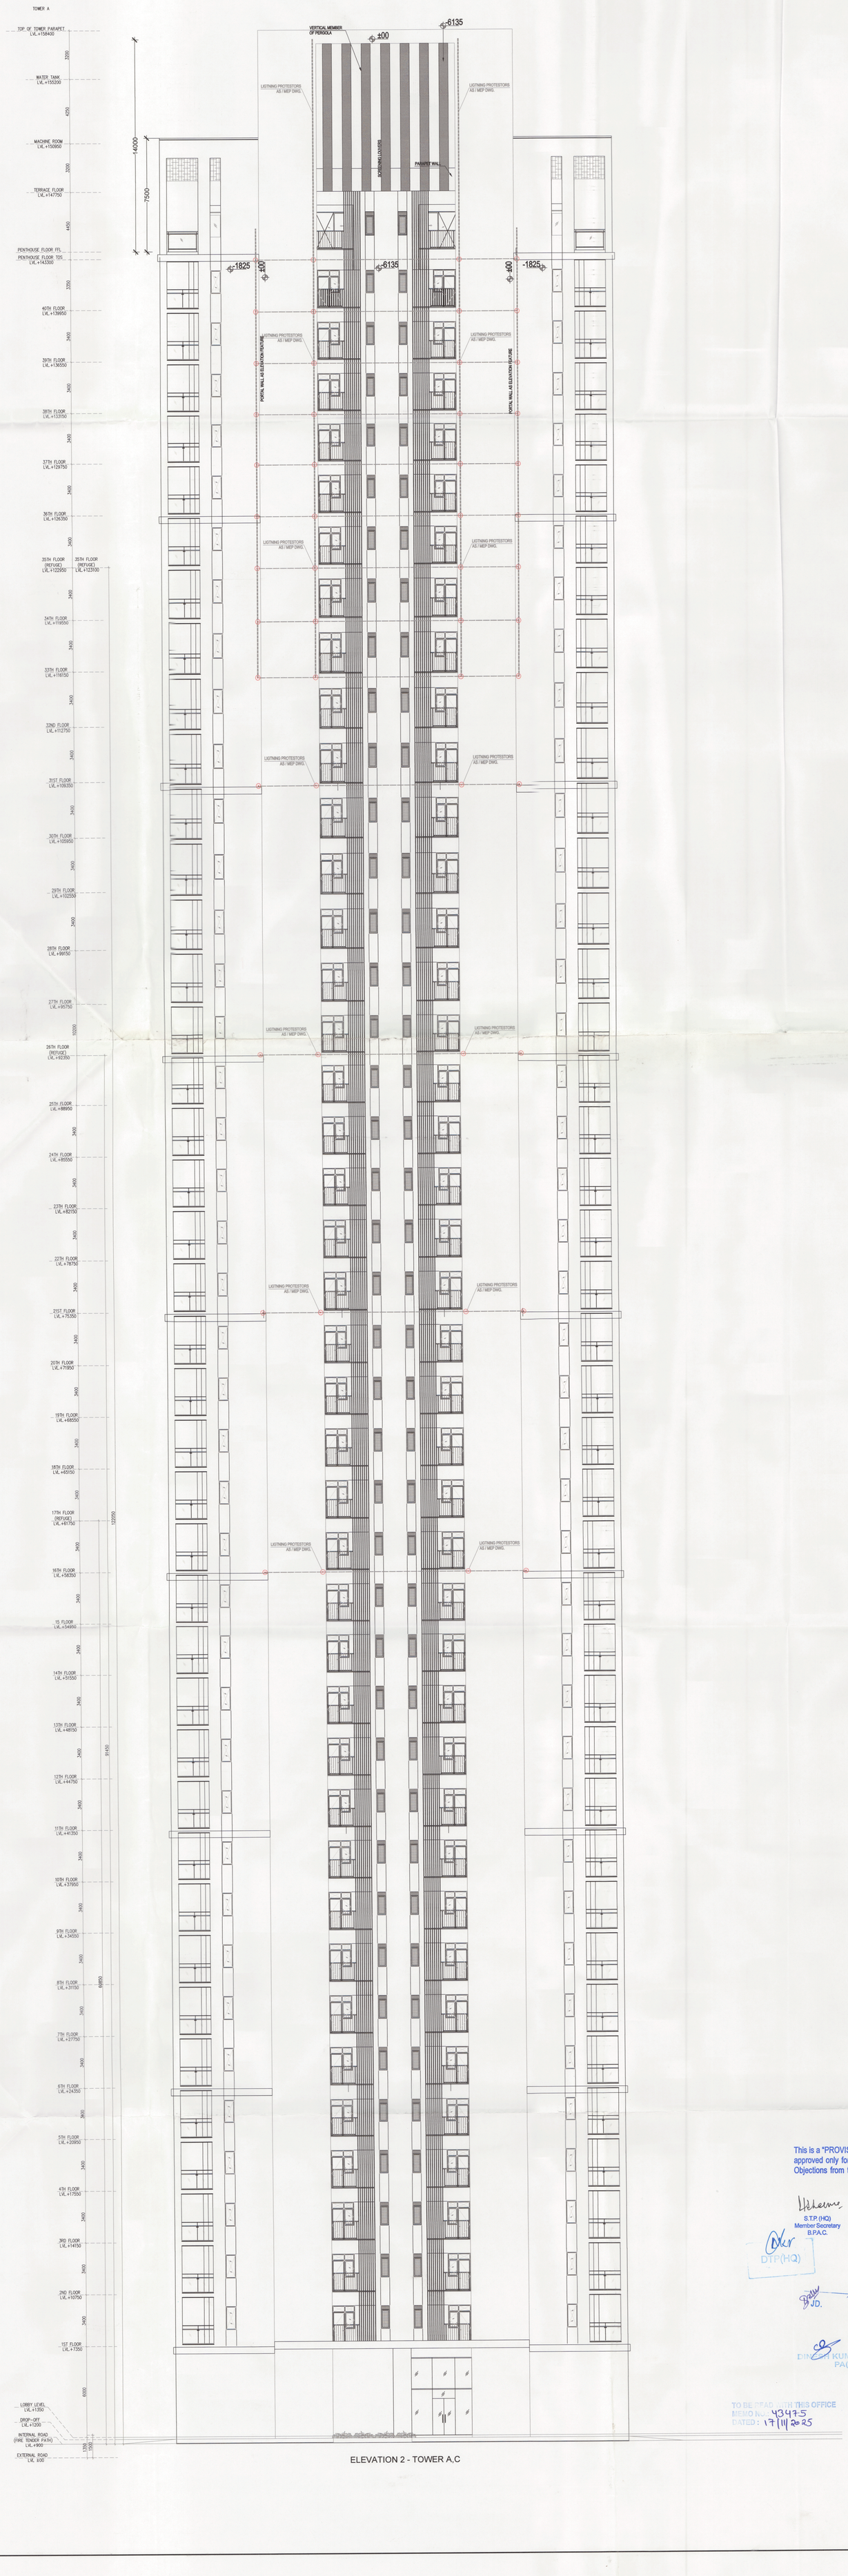

TOWER A
TOP OF TOWER PARAPET LVL.+158400
WATER TANK LVL.+155200
MACHINE ROOM LVL.+150950
TERRACE FLOOR LVL.+147750
PENTHOUSE FLOOR FFL
PENTHOUSE FLOOR TOS LVL.+143300
40TH FLOOR LVL.+139950
39TH FLOOR LVL.+136550
38TH FLOOR LVL.+133150
37TH FLOOR LVL.+129750
36TH FLOOR LVL.+126350
35TH FLOOR (REFUGE) LVL.+122950
35TH FLOOR (REFUGE) LVL.+123100
34TH FLOOR LVL.+119550
33TH FLOOR LVL.+116150
32ND FLOOR LVL.+112750
31ST FLOOR LVL.+109350
30TH FLOOR LVL.+105950
29TH FLOOR LVL.+102550
28TH FLOOR LVL.+99150
27TH FLOOR LVL.+95750
26TH FLOOR (REFUGE) LVL.+92350
25TH FLOOR LVL.+88950
24TH FLOOR LVL.+85550
23TH FLOOR LVL.+82150
22TH FLOOR LVL.+78750
21ST FLOOR LVL.+75350
20TH FLOOR LVL.+71950
19TH FLOOR LVL.+68550
18TH FLOOR LVL.+65150
17TH FLOOR (REFUGE) LVL.+61750
16TH FLOOR LVL.+58350
15 FLOOR LVL.+54950
14TH FLOOR LVL.+51550
13TH FLOOR LVL.+48150
12TH FLOOR LVL.+44750
11TH FLOOR LVL.+41350
10TH FLOOR LVL.+37950
9TH FLOOR LVL.+34550
8TH FLOOR LVL.+31150
7TH FLOOR LVL.+27750
6TH FLOOR LVL.+24350
5TH FLOOR LVL.+20950
4TH FLOOR LVL.+17550
3RD FLOOR LVL.+14150
2ND FLOOR LVL.+10750
1ST FLOOR LVL.+7350
LOBBY LEVEL LVL.+1350
DROP-OFF LVL.+1200
INTERNAL ROAD (FIRE TENDER PATH) LVL.+900
EXTERNAL ROAD LVL.000
14000
7500
3200
4250
3200
4450
3350
3400
3400
3400